

nanometrics

advanced **process control** systems and solutions



Imperia™

Advanced Process Control for
Compound Semiconductor and HB-LED

Nanometrics Incorporated

[Corporate Headquarters]
1550 Buckeye Drive
Milpitas, CA 95035 USA
tel 408.545.6000

Materials Characterization Group
1320 SE Armour Road
Suite B-2
Bend, OR 97702 USA
tel 541.322.2500

www.nanometrics.com

Nanometrics Japan

1F, Pola Dai3 Gotanda Building
8-9-5 Nishi-Gotanda
Shinagawa-ku, Tokyo 141-0031
JAPAN
tel +81 3 5745 9305

Nanometrics Korea

3rd Floor
Hwasung Post Office Building 59-2
Sukwoo-dong Hwasung City Gyeonggi-do
SOUTH KOREA 445-170
tel +82 31 231 8600

China | Taiwan Regions

Quatek Inc.

Unit 2112, 21F, Yong Sheng Tower 2025
West Zhong Shan Road
Shanghai 200235 **CHINA (PRC)**
tel +86 21 64813366

Quatek Co., Ltd.

[Corporate Headquarters]
4/F.,308,Sec.1 Nei Hu Road
Nei Hu, Taipei 11493 **TAIWAN (ROC)**
tel +886 2 27973357
www.quatek.com.tw


nanometrics



With its unique optical design technology, the Imperia detects and classifies yield-killing defects with the additional benefit of simultaneous state-of-the-art photoluminescence (PL) production monitoring.

There are significant economic savings to be gained by more accurately predicting MOCVD reactor yield and PM schedules. Combining these two post-epitaxial metrology screening functions into a single high throughput system minimizes valuable fab space use and cassette handling time.

- Simultaneous photoluminescence measurement with defect inspection
- Defect analysis and classification software capabilities
- High throughput for large substrates, 90 WPH for 150 mm samples
- Fully automated platform with GEM/SECS II capabilities
- Illumination wavelength options at 532, 405, 375 and 355 nm
- Detection options at 350-850 nm and 400-1,000 nm

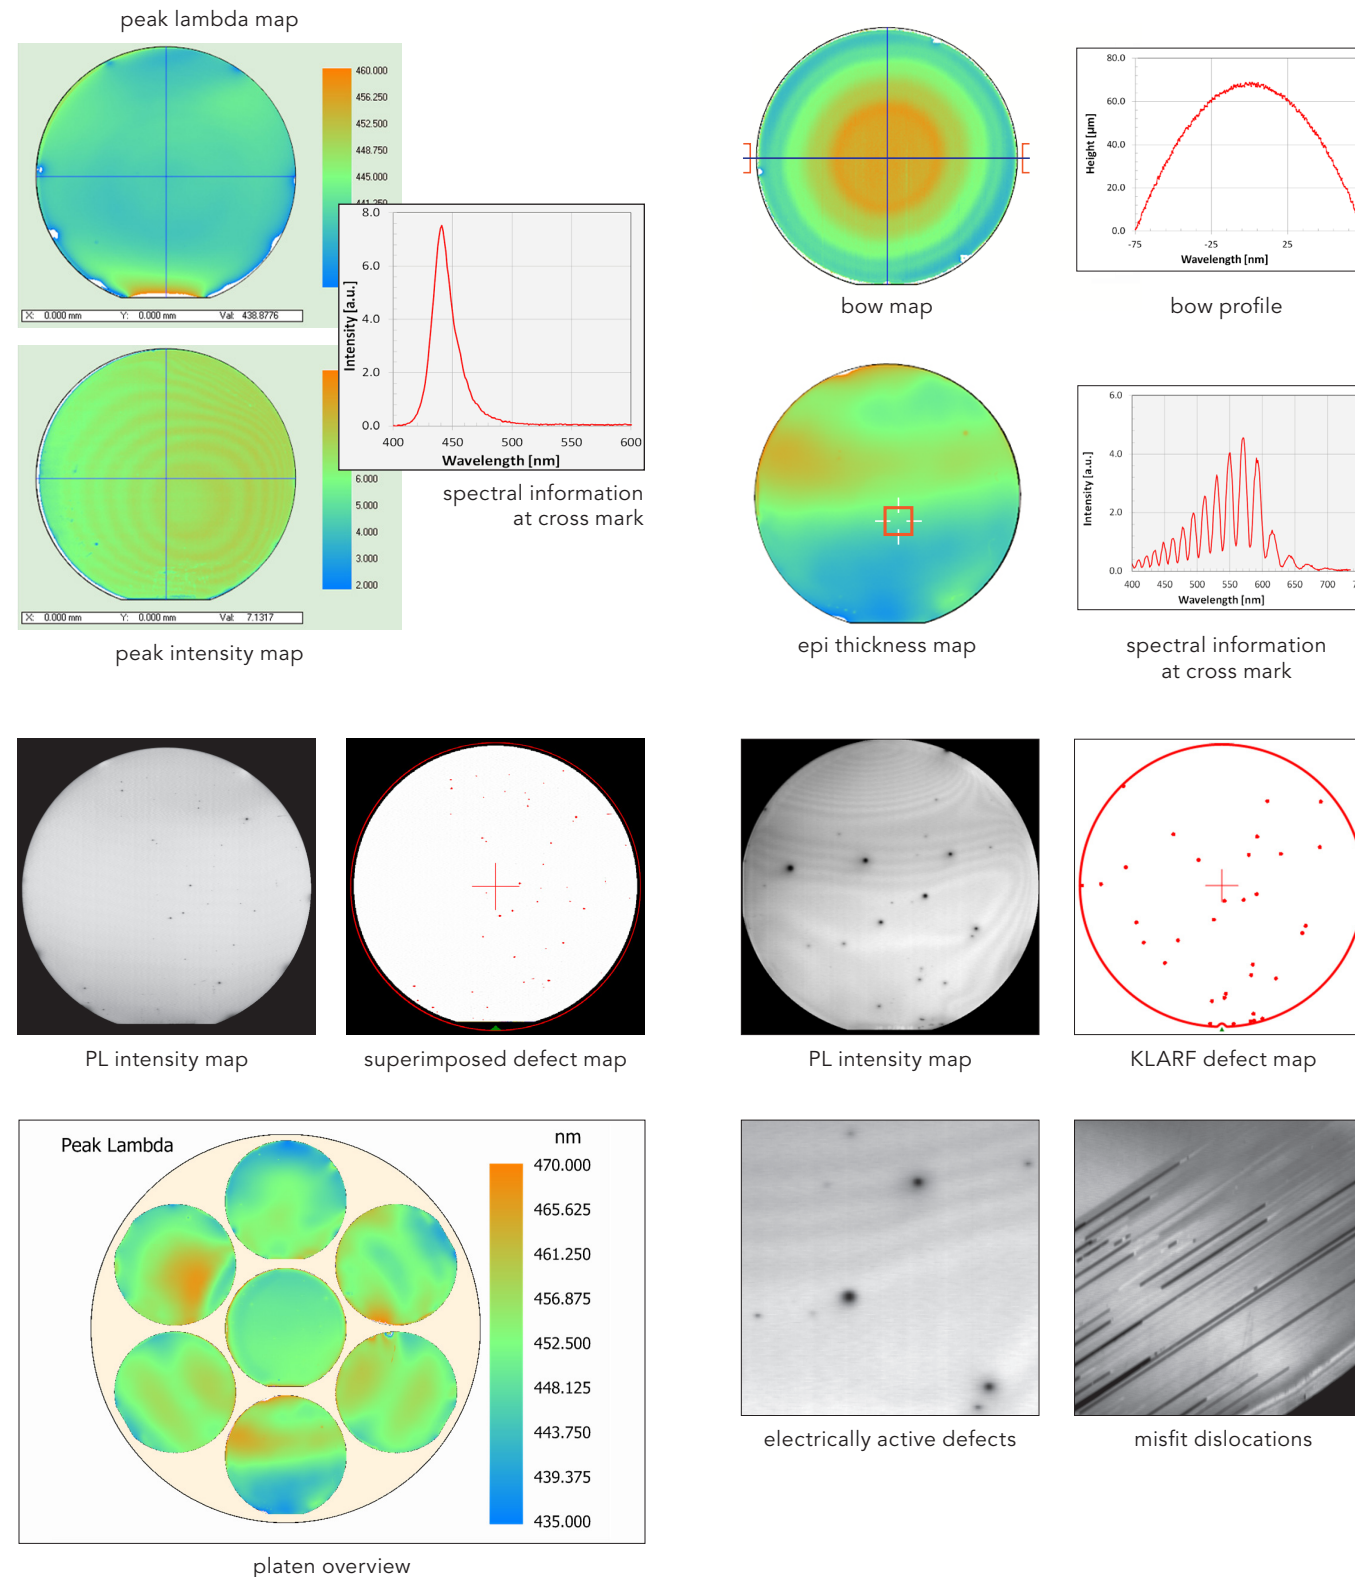

Photoluminescence Mapping

High density imaging of peak lambda, peak intensity, FWHM and other LED materials relevant parameters
 Measurement accuracy and reproducibility (≤ 1 nm)
 Capability of measuring bare and patterned wafers at resolutions down to 125 μ m

Defect Inspection and Analysis

High resolution mapping for defect inspection down to 125 μ m
 Brightfield PL channel for detecting electrically active defects
 Defect extraction, morphological analysis and quantification
 Die-based yield binning capabilities allow yield prediction on a die level
 Real-Time Defect Extractor (RDE) software with KLARF output

Epitaxial Layer Thickness

Epitaxial layer thickness and normalized reflectivity imaging at high resolution down to 125 μ m
 Excellent measurement accuracy (2% of nominal thickness) and reproducibility ($1\sigma \leq 1\%$)

Wafer Bow

Wafer shape profiling at multiple angles and high resolution down to 125 μ m
 Full wafer 3D bow reconstruction via data interpolation and smoothing
 ± 500 μ m bow measurement range and ± 6 μ m reproducibility